
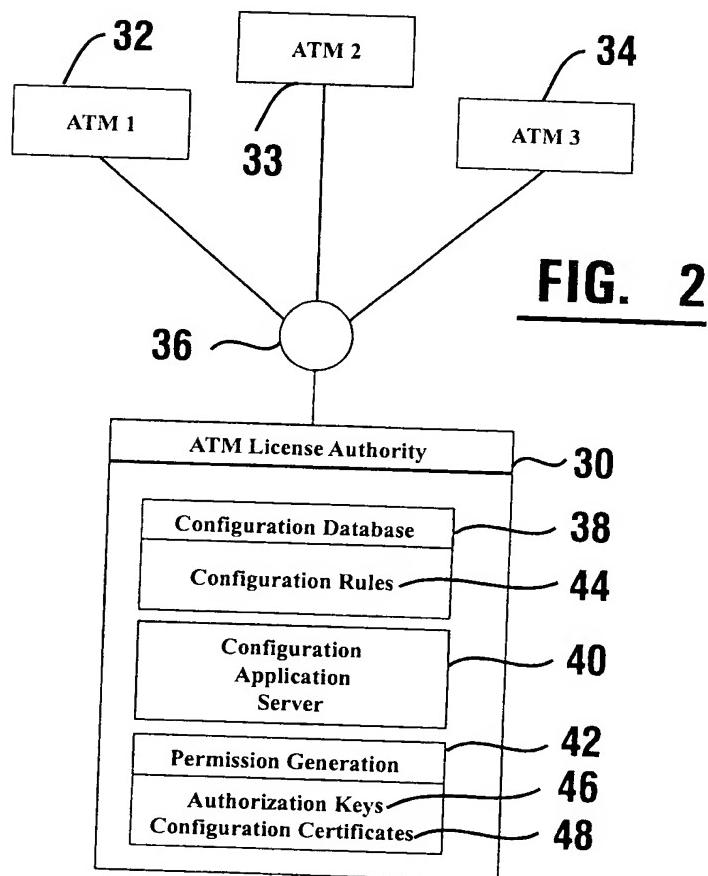


Replacement Sheet

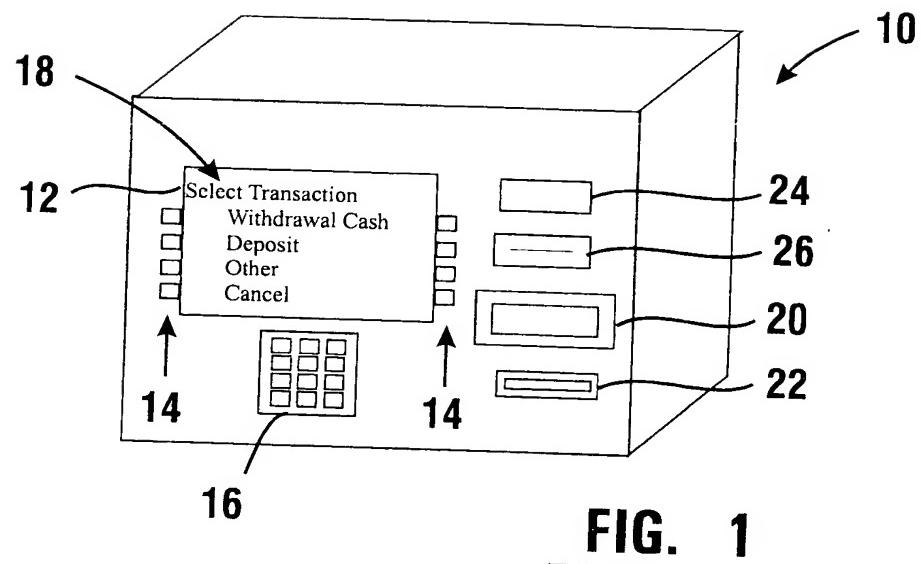

Replacement Sheet


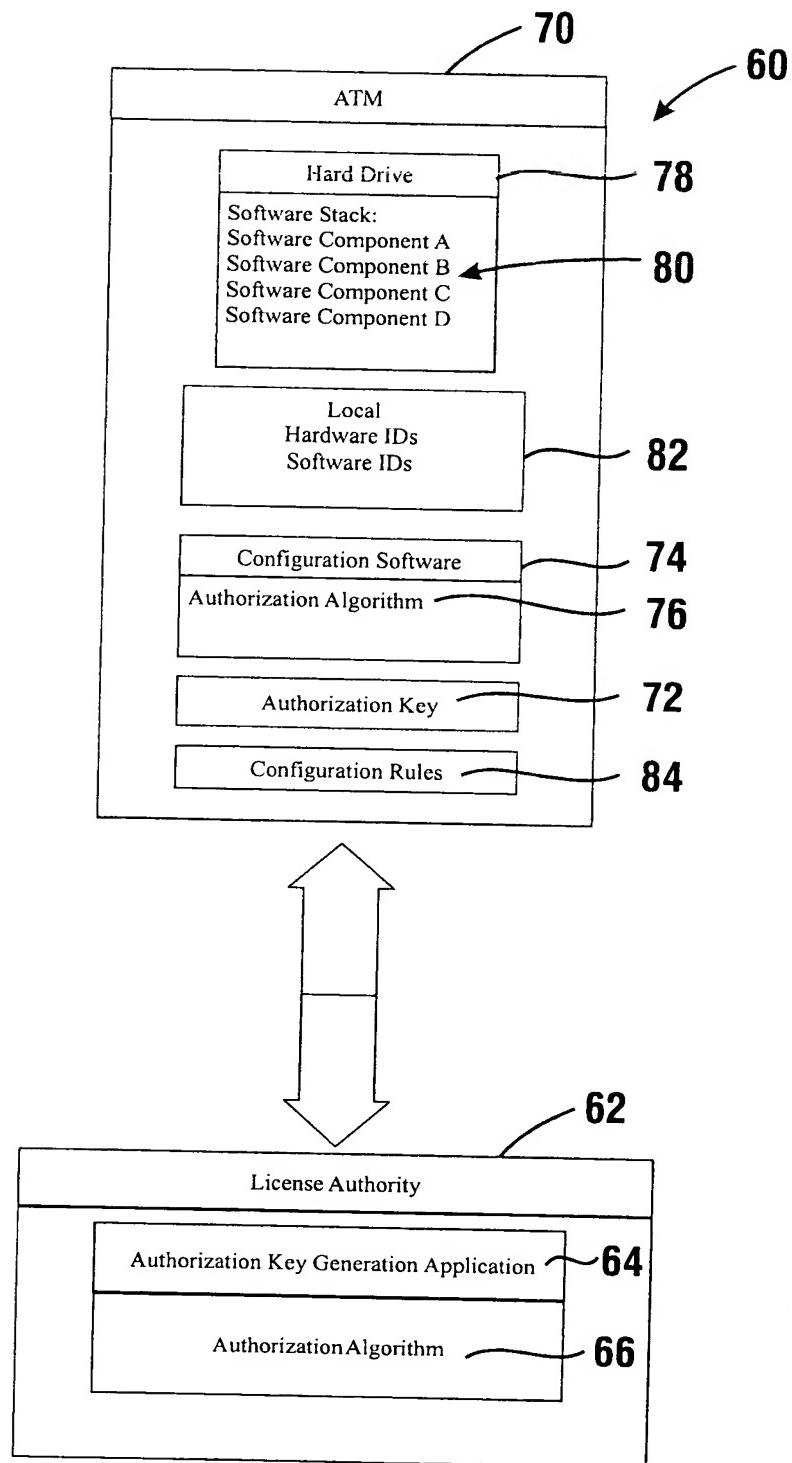


FIG. 3

Replacement Sheet

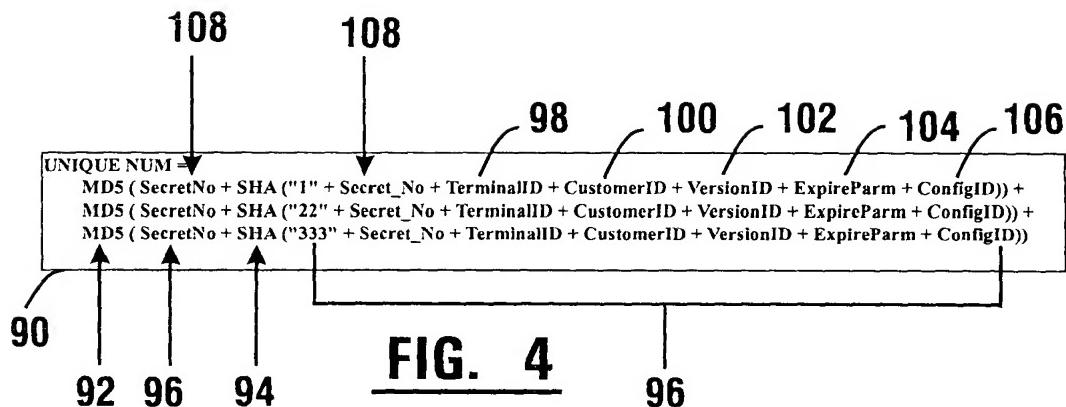

The screenshot shows a configuration interface for an Automated Banking Machine. The title is "AUTOMATED BANKING MACHINE CONFIGURATION".

The interface includes the following fields:

- Enter Authorization Key: -
- Enter Terminal ID:
- Enter Customer ID:
- Enter Expiration Date:
- Enter Configuration ID:


At the bottom are four buttons: BACK, NEXT, CANCEL, and HELP.

Callouts and labels in the diagram:

- A bracket labeled 124 points to the "Enter Authorization Key" field.
- A bracket labeled 126 points to the "212588" input field.
- A bracket labeled 122 points to the "AR8264" input field.
- A bracket labeled 128 points to the entire list of configuration fields (Authorization Key, Terminal ID, Customer ID, Expiration Date, Configuration ID).

FIG. 5

Replacement Sheet

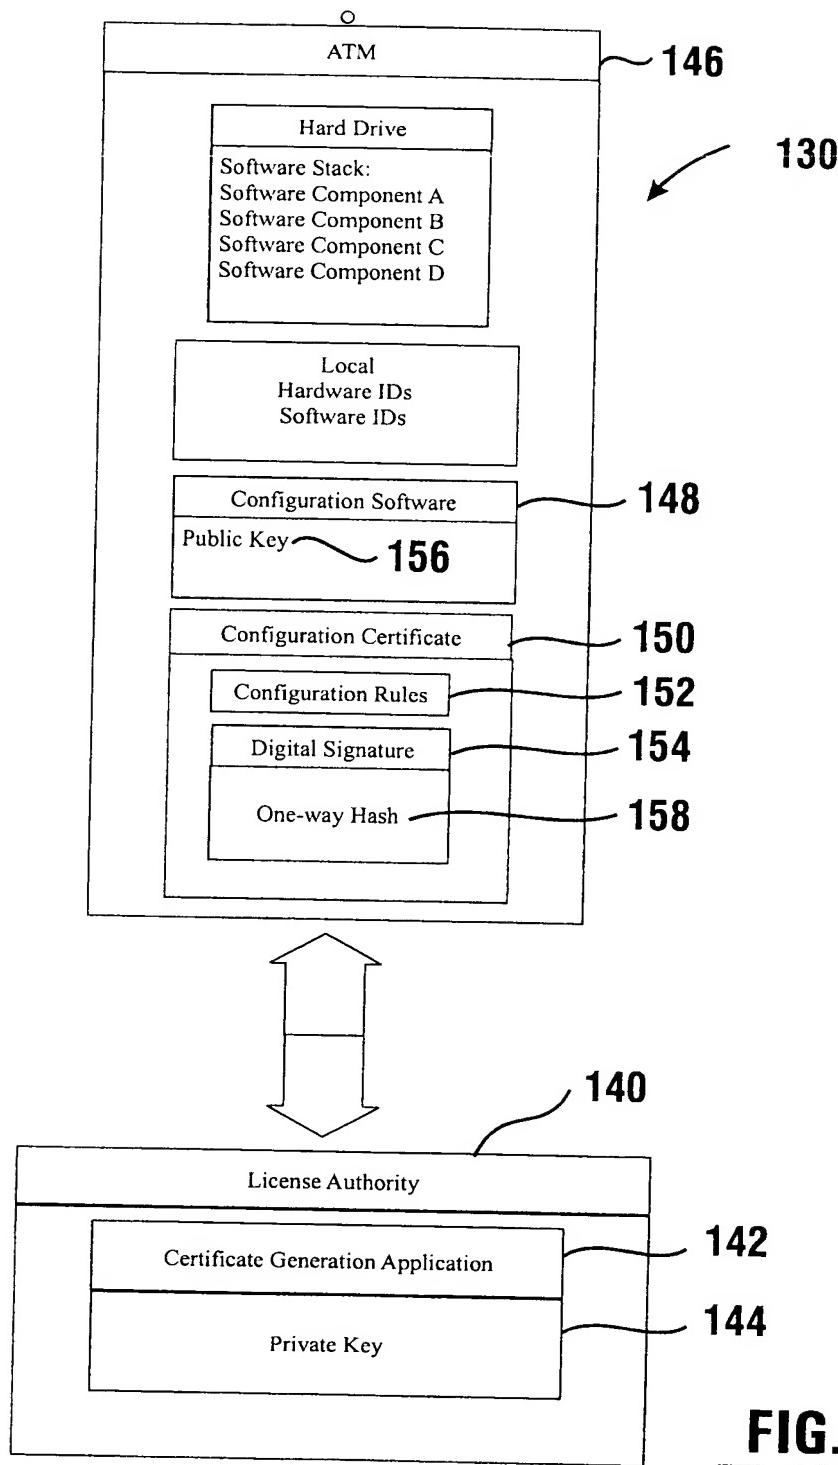

Replacement Sheet

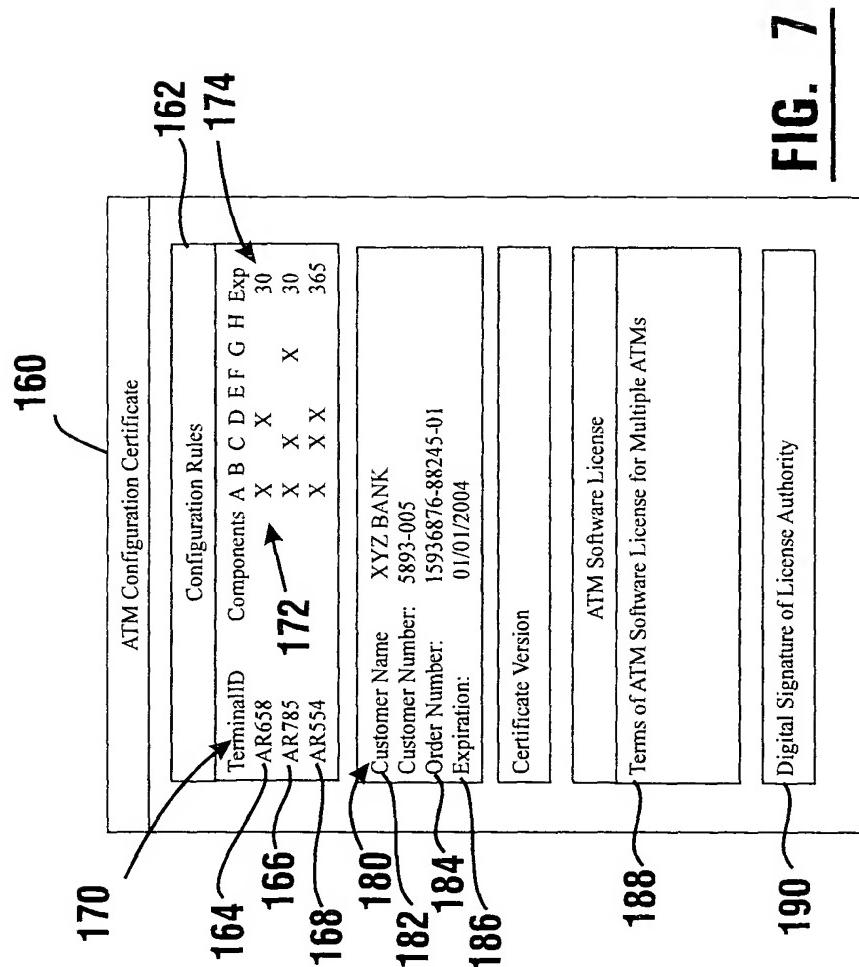


FIG. 7

Replacement Sheet

192

AUTOMATED BANKING MACHINE CONFIGURATION

Enter Location of Certificate:

FIG. 8

200

AUTOMATED BANKING MACHINE CONFIGURATION

Terminal Configurations Authorized on Certificate
Select a Configuration for this Machine:

TerminalID	Components	A	B	C	D	E	F	G	H
AR658		X	X						
AR785		X	X					X	
AR554		X	X	X					

FIG. 9

202